

CF-Memory Card Formatting

IR44CF-II

Version: 2105

Table of Content

1 Introduction.....3

2 Formatting on the laptop/PC.....3

3 Formatting in the IR-44CF II.....6

1 Introduction

To be able to use a new CF- Memory Card in an IR-44CF II, Card must be formatted before it can be inserted into the IR-44CF II system.


Without this step cannot be created an ATIS folder on the CF- Memory Card.

The card must be formatted using a laptop or PC.


Its also possible to do this with a Multi Card Reader or a special slot in the laptop/PC.

2 Formatting on the laptop/PC


- a) Insert the Memory card in the Multi Card Ceader or laptop/PC and click with the right mouse button on the icon „**This PC**“ to be able to chose „**Manage**“ from the drop-down list.

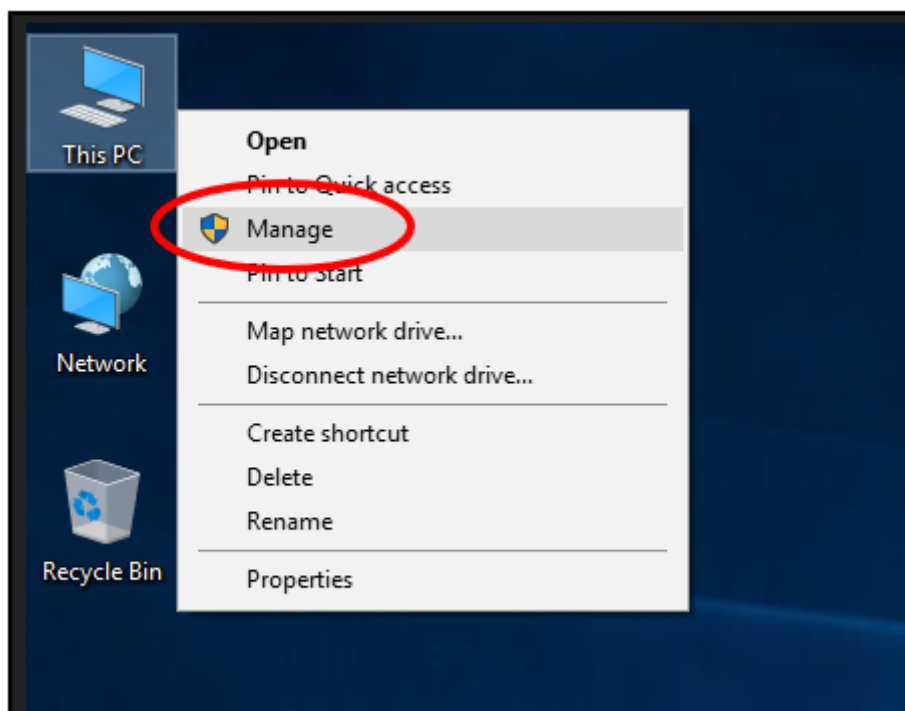


b) button on the Card, the Drop-Down list will open, then select the option „Format“.

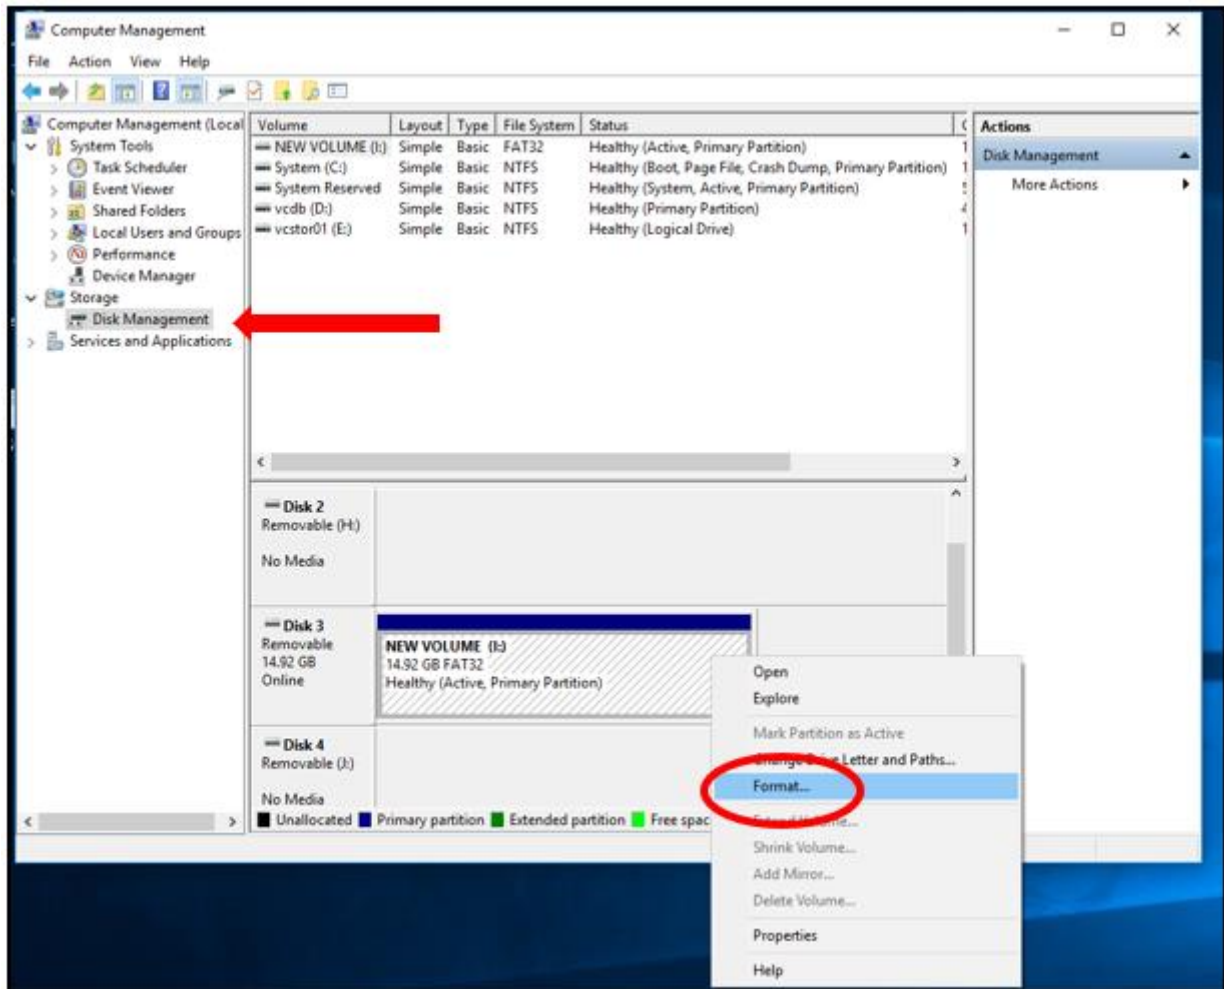


c) A message appears that all data on the partition (CF memory card) will be lost. Confirm with „YES“

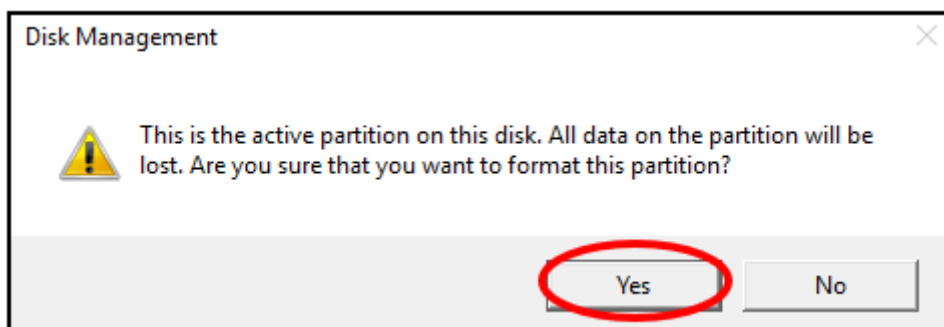

- d) After that it shows up a window where can the partition be renamed. The other settings can be confirmed with „OK“.

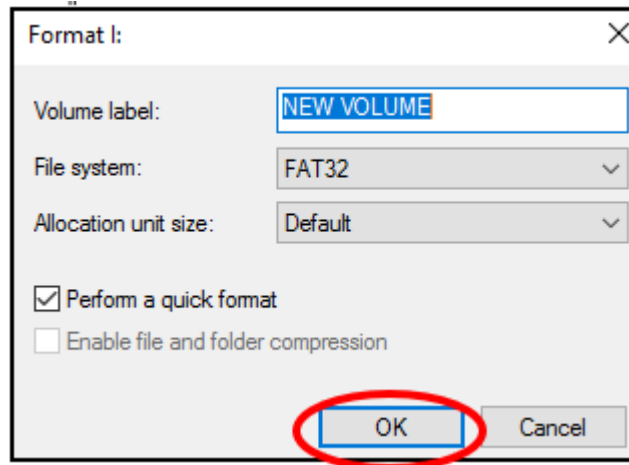


- e) The Formatting starts.

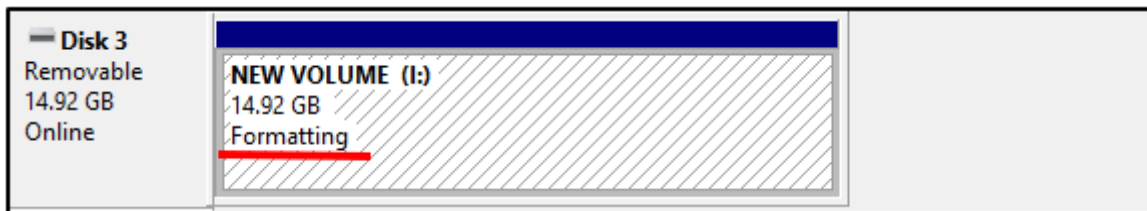

It is not allowed to remove the Card during formation

- f) The message „Healthy (Active, Primary Partition)“ indicates that the memory card was formatted successfully.

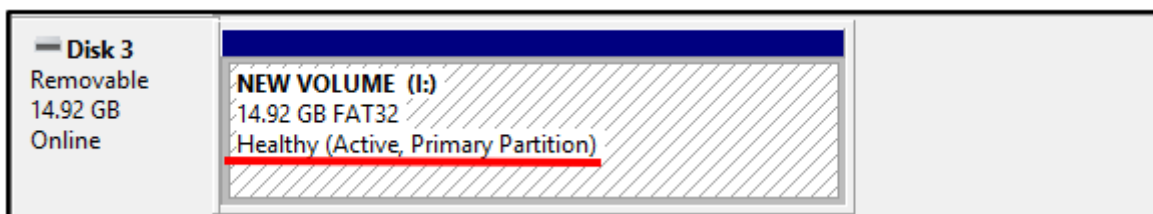


- g) Now the CF- Memory Card can be removed from the card slot.


3 Formatting in the IR-44CF II

After formatting, the CF- Memory Card must be formatted a second time in the IR-44CF II. In this step a folder (ATIS) is created on the Memory Card. This folder is necessary to store the records.


- a) The pre-formatted Memory Card must be inserted into the IR-44CF II CF- Card slot in the front. The message that the ATIS folder is missing and whether it should be created appears in the display of the IR-44CF II.
To create the folder, it must be confirmed with the „**PLAY**“ button.

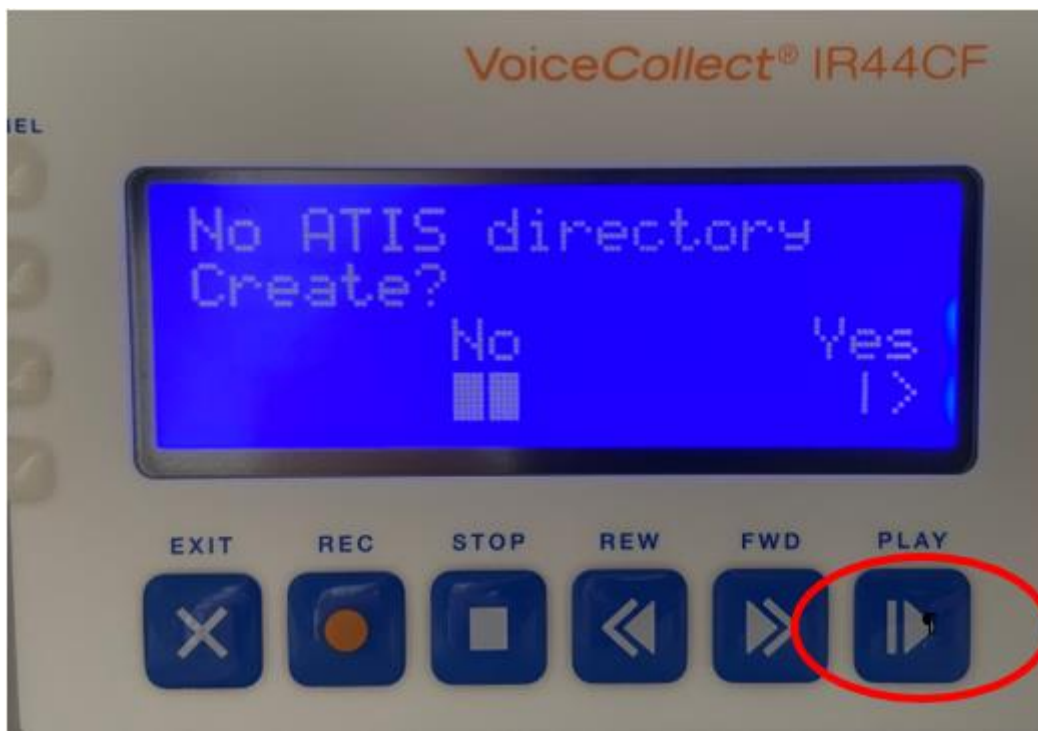


- b) After the message appears in the display, the Memory Card must be formatted again in the IR-44CF II by pressing the „PLAY“ button.

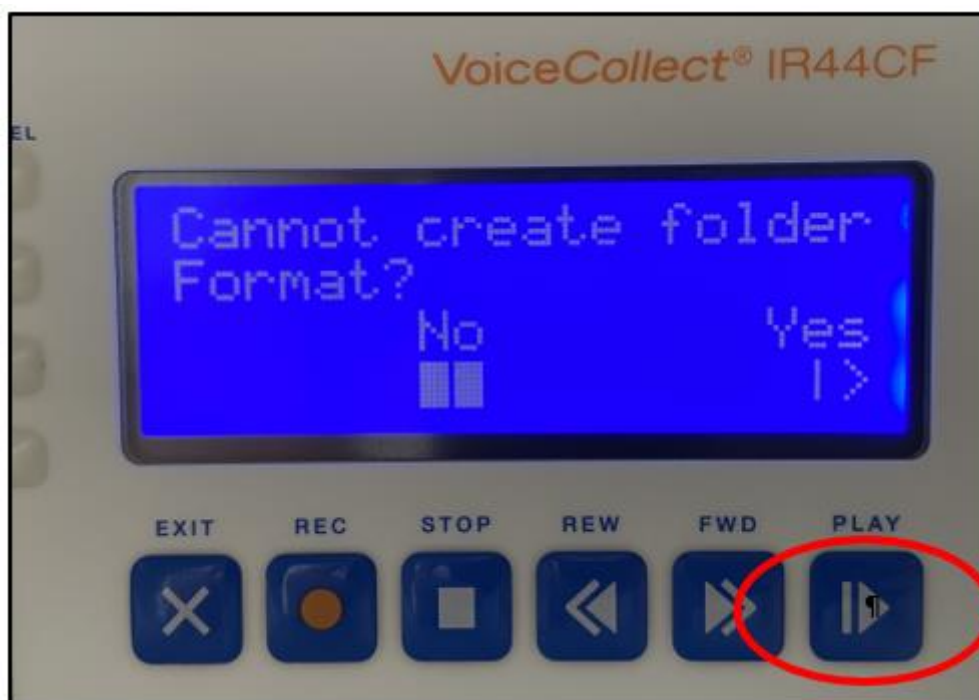

- c) Then the Card can be renamed. The number can be changed by using the REW an FWD buttons.
To start the process, press the „PLAY“ button.

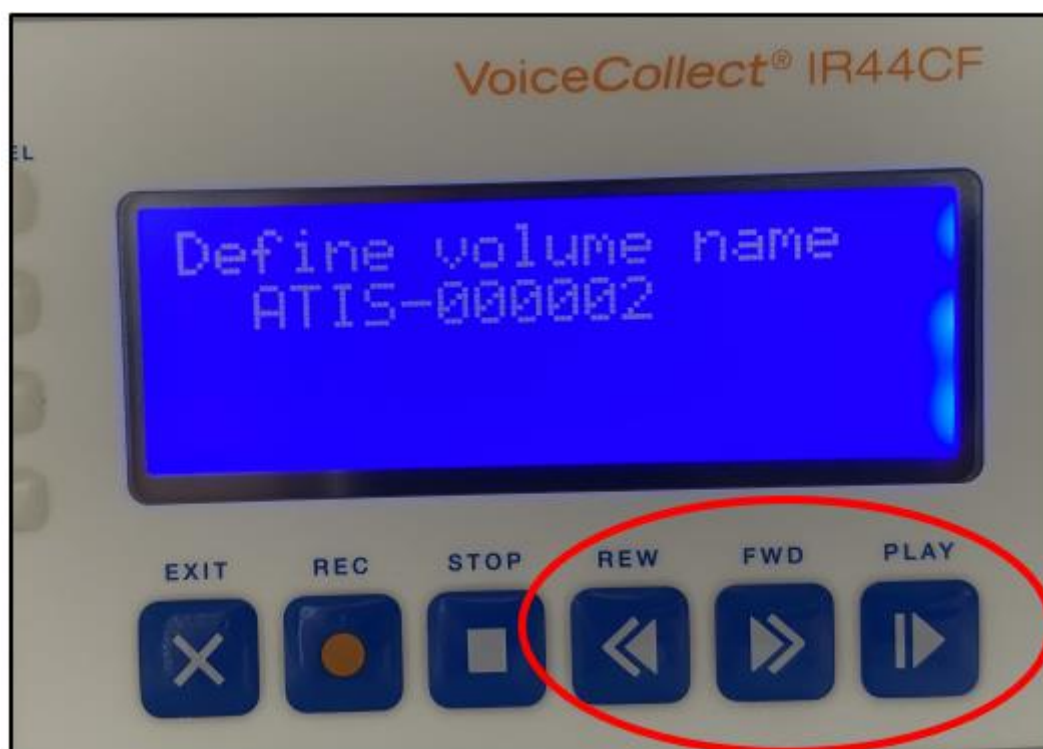

- d) The display of the IR-44 CF II shows that the „Volume“ (Memory Card) is being formatted with the specified name. It is not allowed to remove the card from the device during the formatting process.

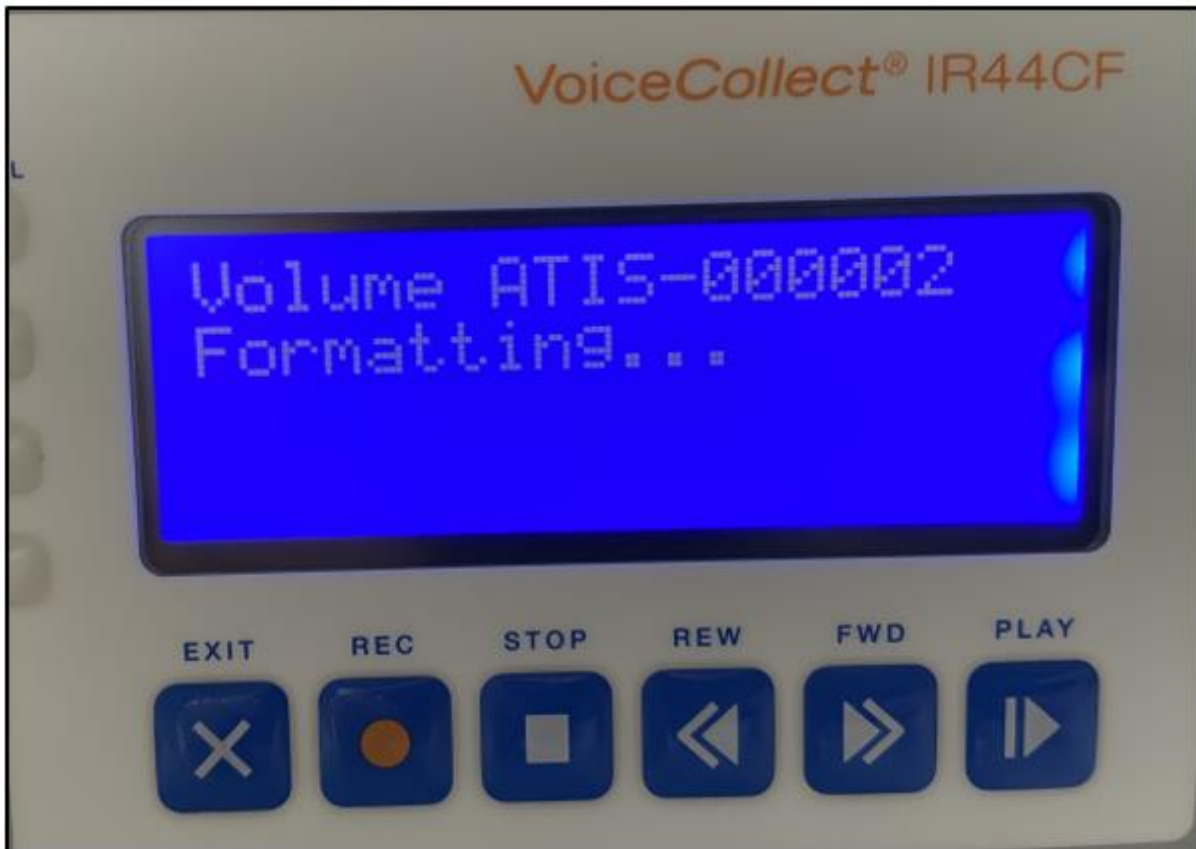

- e) When the display with the summarized data appears, formatting is complete and the Memory Card can be used now.



*** End of Document***