

## Important note:

### Too tight fitting CompactFlash (CF) Memory Card!


#### CAUTION



#### Damage of the eject mechanism!

The CF Memory Cards of some manufacturers are difficult to eject due to manufacturing tolerances. The eject mechanism can be damaged if the eject button is pressed too firmly.

Please read the information given below!

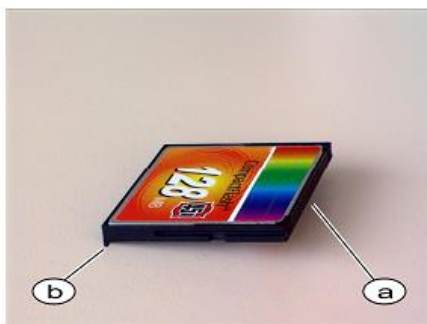

#### Elements of the CF Memory Card:

- (a) Contact strip
- (b) Protruding edge



#### How to insert the CF Memory Card:

- ⇒ Insert the CF Memory Card into the slot with the contact strip (a) first and the protruding edge (b) downwards.
- ⇒ Push the CF Memory Card careful and complete into the slot.
- ☺ The eject key (c) appears.



#### How to remove the CF Memory Card:

- ⇒ Do the preparations for the removal of the CF Memory Card as described in the User's Manual.
- ⇒ Push the eject key (c) carefully.
- ☺ To facilitate the ejection of CF Memory Cards which are difficult to remove or jammed into the card slot, please proceed as following:
- ⇒ grip and pull the CF Memory Card out using the protruding edge (b) at the same time you push the eject key (c) **carefully**.