83

118.5

33

ATIS HHER

ALARM INDICATOR
Freq.

1 2 3

83

33

Reset

3 2 1

IN

GND +1V
+12V 1V
GND

RJ45

8 1

Pin	Signal	Function
1	ALIN 2	Errors
2	+12Vdc	
3	VIN2	
4	+12Vdc	
5	ALIN 1	Messages
6	GND	
7	ALIN 3	SW errors
8	+12Vdc	

ALARM INDICATOR

DC
12V

AC
100-240V

RJ
45

D-Sub (F)
15pin

To VC-MDx

K2 2 / 10 — Errors — 1 / 2 / 3 / 4
K1 9 / 1 — Messages — 5 / 6
K4 4 / 12 — SW-Errors — 7 / 8
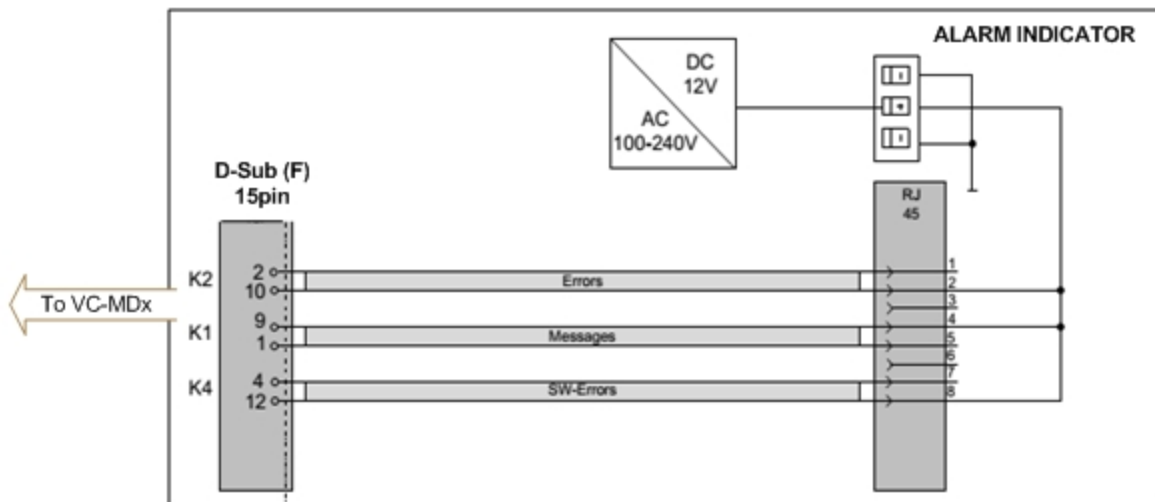
User / Recorder	LED'	Buzzer
1. Power supply connexion K1, K2, K3 & K4 closed	**Led 1 & 2 Green**	**OFF**
2. Recorder Alarm 1 K1 open, K2, K3 & K4 closed	**Led 1 Red**	**ON**
3. Push reset button	**Led 1 Red**	**OFF**
4. No alarm K1, K2, K3 & K4 closed	**Led 1 & 2 Green**	**OFF**
5. Recorder Alarm 2 K1 closed, K2 open, K3 & K4 closed	**Led 2 Red**	**ON**
6. Push reset button	**Led 2 Red**	**OFF**
7. No alarm K1, K2, K3 & K4 closed	**Led 1 & 2 Green**	**OFF**
8. Recorder Alarm 3 Recorder appl. Blocked/ frozen or SW sentinel not running,K1, K2 closed, K3 or K4 open	**Led 3 Red**	**ON**
9. Push reset button	**Led 3 Red**	**OFF**
10. No alarm K1, K2, K3 & K4 closed	**Led 1, 2 &3 Green**	**OFF**

VoiceCollect

VoiceCollect GmbH
Justus-von-Liebig-Str.5
61352 Bad Homnburg

Rev.No.	Date	Name
00002	13.02.2019	
00001	13.02.2019	PE
Rev.No.	Date	Name

Release of production / Modification

Device
**Alarm Indicator
with cable for
1 Recorder**

Article-No
7147120

Replace

Replace by